

Bath Filler Mixer

Fitting Instructions & Contents List




Water Pressure

The mixer is suitable for use at water supply pressures of 0,1 bar (min.) to 7 bar (max.).

If installed at a low pressure, then minimum height from the outlet of the nozzle to the underside of the cold tank should be 2 metres to ensure adequate performance.

This mixer should be installed in compliance with Water Regulations. For further details contact your Local Water Authority.

- Identify all components and check pack contents.
- Turn off mains water supply.
- It is also recommended that the water heating arrangements are turned off.
- Drain the cold and hot water system. It is recommended to ensure complete drainage.

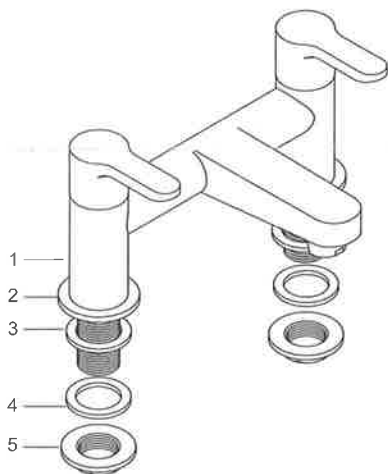

Item NO	Description	Qty
1	Tap Body	1
2	Flange	2
3	Anti-Rotational Washer	2
4	Washer	2
5	Plastic Back Nuts	2
5	Optional Brass Back Nuts	2

Installation

- Make sure that the Anti-Rotational Washer (3) has been fitted to Flange(2). Fit Flange(2) to the Tap Body (1).
- Fit Tap Body(1) to bath, ensuring that the Anti-Rotational Washer (3) is fitted between the Tap Body (1) and the bath.
- Fit Washer (4) over inlet legs. Then fit Back Nuts (5) to the inlet legs and tighten, DO NOT OVERTIGHTEN.
- Connect to the water supply using suitable plumbing joints.
- Turn on the hot and cold and mains water supply. Check for leaks immediately. It is always advisable at this stage to flush out the system. To do this, open both valves fully and allow water to flow for approx. 1 minute. This will remove any foreign matter within the installation.
- Finally turn on all the water heating arrangements.

Aftercare Instructions

Whilst modern plating techniques are used in the manufacture of these fittings, the plating will wear if not cleaned properly. The safest way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

Guarantee

15 year guarantee on the tap body and a 10 year guarantee on the valve to cover any defect in manufacture.

NOTE:-the 10 year guarantee on the valves is invalidated if damaged by any waterborne debris.

Please keep these instructions for future reference and for the request of spare parts. For further technical help or advice please contact your local branch or visit www.iflo.co.uk